




Quick Sheet Instructions

Slide Valve Replacement

#501190

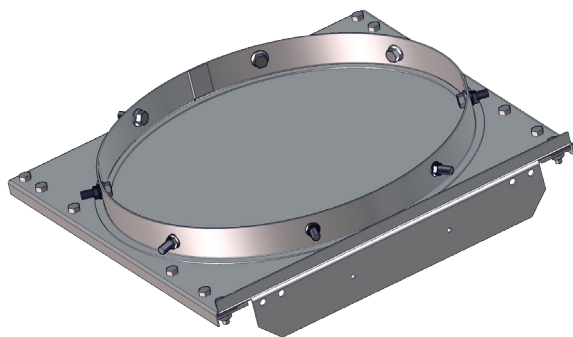


Assembly Instructions

1. Place the 501190 Slide Valve up into the Bin Collar so that the Slide Plate opens to the front of the bin.
2. Secure the Slide Valve with 5/16" - 18 x 1" Hex Head Bolts and 5/16" - 18 Flange Nuts.



Bolt Heads should be to the inside of the Slide Valve.


Figure 1

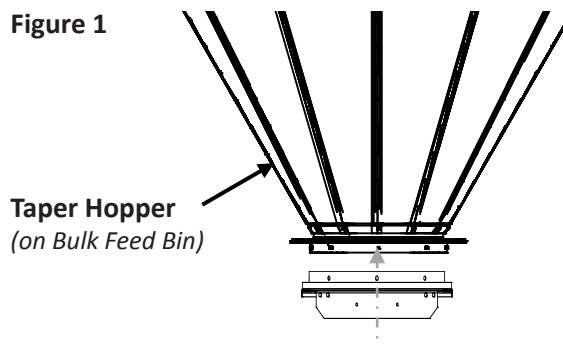

Parts List

PART #	DESCRIPTION	QTY
501190 SLIDE VALVE REPLACEMENT		
501279	16" Slide Valve Housing Assembly	1
501256	Thin Spacer	6
501258	Retainer Strip	2
501255	Slide Plate	1
011114	5/16" - 18 Heavy Hex Nut	12
010645	5/16" - 18 x 1" Hex Head Bolt	12
010252	5/16" - Split Lock washer	12
501277	Hardware Bag (contents listed below)	1
501442	5/16" - 18 x 1" Hex Head Bin Bolt	8
501441	5/16" - 18 Flange Nut	8

Figure 2 Slide Valve - Exploded

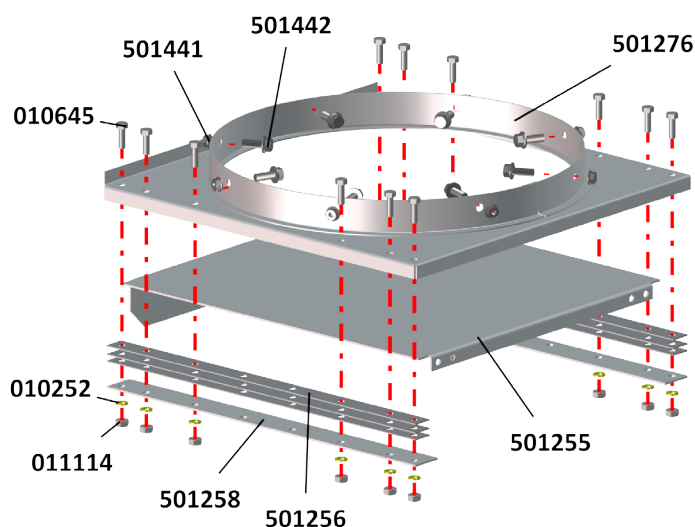

501442



501441



010645



010252



011114



North America:

Phone: 800.99VALCO (800.998.2526)

Fax: 419.678.2200

Email: sales@val-co.com

U:\MANUALS\990000\990034

JDS REV (2) 05/10/2013

International:

Phone: (+1) 419.678.8731

Fax: (+1) 419.678.2200

Email: intl.sales@val-co.com