

## COMMUNITY NEST INLINE EGG BELT TRANSFER INSTALLATION INSTRUCTIONS

TO INSTALL THE INLINE EGG BELT TRANSFER SYSTEM, USE THESE INSTRUCTIONS AS A SUPPLEMENT TO THE 990004 COMMUNITY NEST INSTALLATION MANUAL.

THESE INSTRUCTIONS ARE TO BE USED IN CONJUNCTION WITH THE FOLLOWING CHAPTERS FROM THE COMMUNITY NEST INSTALLATION MANUAL:

2.5 SUB-ASSEMBLY - IDLER FRAME

2.6 SUB-ASSEMBLY - EGG BELT DRIVE UNIT WITH LEGS

2.7 SUB-ASSEMBLY - EGG BELT EXTENDER COVER

3.1 EGG BELT DRIVE UNIT / EGG BELT EXTENDER COVER

3.5 EGG BELT ASSEMBLY - LAYING THE BELT ONTO THE FRAME

3.6 EGG BELT ASSEMBLY - THREADING BELT THROUGH THE EGG BELT EXTENDER COVER

3.7 EGG BELT ASSEMBLY - THREADING BELT THROUGH THE EGG BELT DRIVE UNIT

 
3.9 THREADING THE EGG BELT THROUGH THE IDLER AND LACING


3.10 CUTTING THE EGG BELT - (FOR LACING OR WELDING)

3.11 LACING THE EGG BELT ENDS

3.12 WELDING THE EGG BELT ENDS

SEE EGG BELT VFD CONTROL FOR ELECTRICAL INSTALLATION.



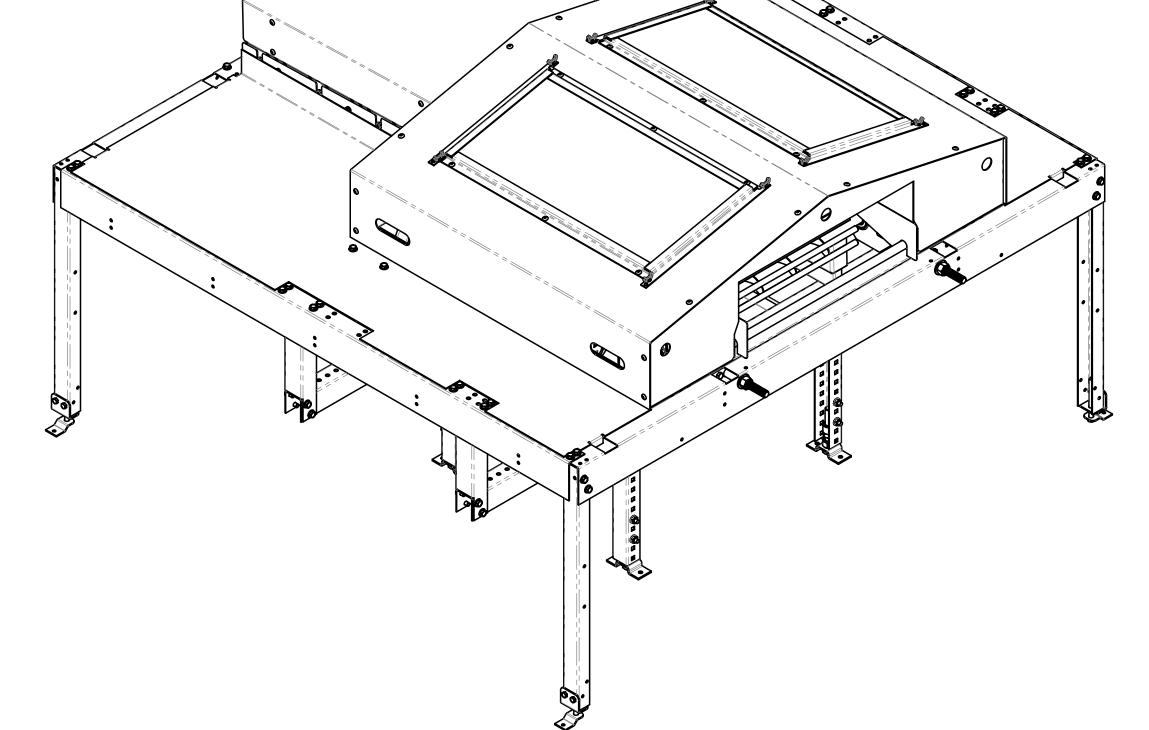

UNSPECIFIED TO 2 PLACE 3 PLACE 4 PLACE HOLE DIA. ANGULAR	± .060 ± .030 ± .010 ± .010 + 1°	DIMENSINS ARE IN INCHES DIMENSIONS IN ( ) ARE MILLIMETERS UNLESS OTHERWISE SPECIFIED. DO NOT SCALE
71110027111 = 1		DATE 8/2/13

VALCO COMPANIES, INC.

A. ± .010
NR ± 1°
DO NOT SCALE

Ig and any print he property of DMPANIES INC, ect to return on this company. adian shown is all and the by accepting this grees not to use in the contained any manner grees not to use the contained any manner grees not to use the contained any manner grees not to use gettimental to be gettimental to be

