




Side Belt Nest Collection Table

412100-XH, 412160-XH, 412165-XH
412100, 412160, 412165

COLLECTION TABLES:

412100-XH - 1/2 HP, 110V, Extra Height Legs
412160-XH - 3/4 HP, 110V, Extra Height Legs
412165-XH - 1/2 HP, 220V, Extra Height Legs
412100 - 1/2 HP, 110V
412160 - 3/4 HP, 110V
412165 - 1/2 HP, 220V

Repair Parts

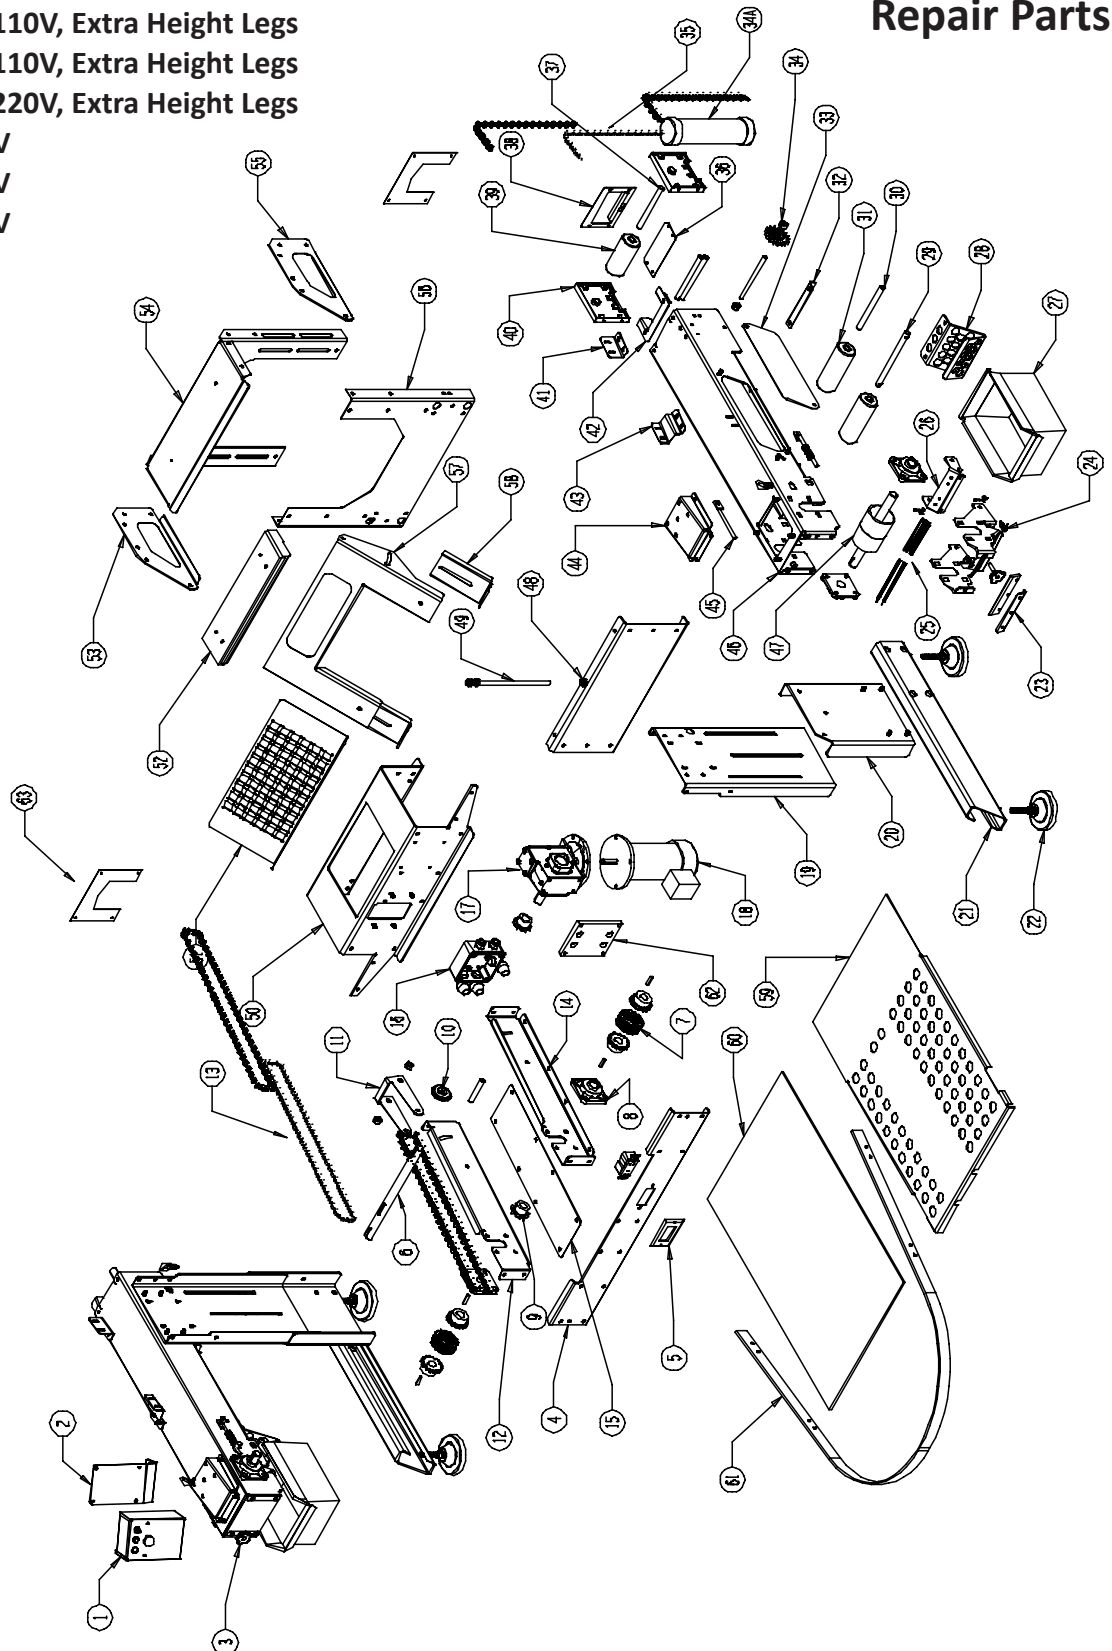


Side Belt Collection Table - Parts List

KEY #	PART NO.	DESCRIPTION	QTY.	KEY #	PART NO.	DESCRIPTION	QTY.
1	412510	115V DC CONTROLLER	1	28	412161	LITTER DRAWER RETAINER	2
2	412187	CONTROLLER MOUNT	1	29	412126	PINCH ROLL SHAFT	2
3	412133	ADJUSTER KNOB	2	30	412122	ROLLER SHAFT	6
4	412101	FRONT PANEL	1	31	412123	6-5/8" DRIVE ROLLER	4
5	415411	GFI RECEPTACLE	1	32	412113	HOUSING TIE	2
	720016	RECEPTACLE BOX	1	33	412177	ACCESS DOOR	2
6	412130	DRIVE SHAFT	1	34	412120	IDLER SPROCKET	2
7	412263	CHAIN, COUPLER, 4016	2		412136	1/2" LOCKING COLLAR	4
	412262	HUB, CHAIN COUPLER, 4016, 1"	4		412121	SPROCKET SHAFT	2
	412135	1/4 X 1/4 X 1" KEY	4	34A	750014	COUNTER WEIGHT	2
8	420451	1" FLANGE BEARING	6	35	420462	#40 ROLLER CHAIN	19"
9	420460	DRIVE ROLLER SPROCKET	2		420463	#40 MASTER LINK	4
	412135	1/4 X 1/4 X 1" KEY	2	36	412116	TENSIONER BASE	2
10	425053	ROLLER CHAIN TIGHTENER	1	37	412129	TENSIONER SHAFT	2
	412125	IDLER SPROCKET SHAFT	1	38	412115	TENSIONER BACK	2
	412136	1/2" LOCKING COLLAR	2	39	412128	TENSIONER ROLLER	2
11	412144	TENSIONER HANDLE	1	40	412124	TENSIONER SLIDE PLATE	4
12	412114	LEFT CHAIN HOUSING	1	41	412151	EGG GUIDE BRACKET	2
13	420462	#40 ROLLER CHAIN	54"	42	412155	NEST - TABLE BRACKET	2
	412194	#40 OFFSET LINK	1	43	412382	FRT. EGG GUIDE BRKT.	2
	420463	#40 MASTER LINK	1	44	412156	ROLLER COVER	2
14	412142	RT. CHAIN HOUSING	1	45	410745	PINCH ROLL BRACKET	4
15	412143	CHAIN HOUSING BASE	1		420464	SPRING	4
16	412195	ELECTRIC BOX	1	46	412102	LEFT HOUSING	1
17	412514	358 RPM GEARBOX	1		412103	RIGHT HOUSING	1
18	420449	1/2HP ELECTRIC MOTOR	1	47	412119	DRIVE ROLL	2
19	412106	RIGHT LEG	1	48	412108	LEG TIE PLATE	1
	412107	LEFT LEG	1	49	412132	1/2" THRD ROD W/NUT	1
*20	412104	RIGHT LEG BASE	1		412359	1/2" CASTLE NUT	1
	412105	LEFT LEG BASE	1		011378	1/8" X 3/4" ROLL PIN	1
	412197	RIGHT LEG BASE, LONG	1	50	412109	MOTOR MOUNT	1
	412198	LEFT LEG BASE, LONG	1	51	412193	EGG PLATE	1
21	412111	RIGHT BASE CHANNEL	1	52	412182	LIGHT FIXTURE	1
	412112	LEFT BASE CHANNEL	1		412185	LIGHT BULB	1
22	412118	FOOT PAD	4	53	412147	LEFT RACK ARM SUPPORT	1
23	412117	SCRAPER SUPPORT	2	54	412146	RACK TOP	1
	412154	BELT SCRAPER	2	55	412145	RT RACK ARM SUPPORT	1
24	412153	SCRAPER BRACKET	2	56	412148	RACK BASE	1
	412360	LOCKING SPRING PLUNGER	4	57	412386	RACK ARM SUPPORT	1
25	412157	BRUSH RETAINER	2	58	412149	RACK ARM	1
	412199	5" BRUSH	4	59	412110	TABLE TOP	1
26	412159	BRUSH BRACKET	2	60	412196	TABLE MAT	1
	500478	5/16" X 1/2" CLEVIS PIN	4	61	412152	EGG GUIDE	1
	012660	COTTER PIN	4	62	412520	MOUNT PLATE	1
27	412178	LITTER DRAWER	2	63	412270	WALL COVER	1

* 412197 & 412198 only used in -XH model Collection Tables

412180 Belt Return - Exploded View & Parts List

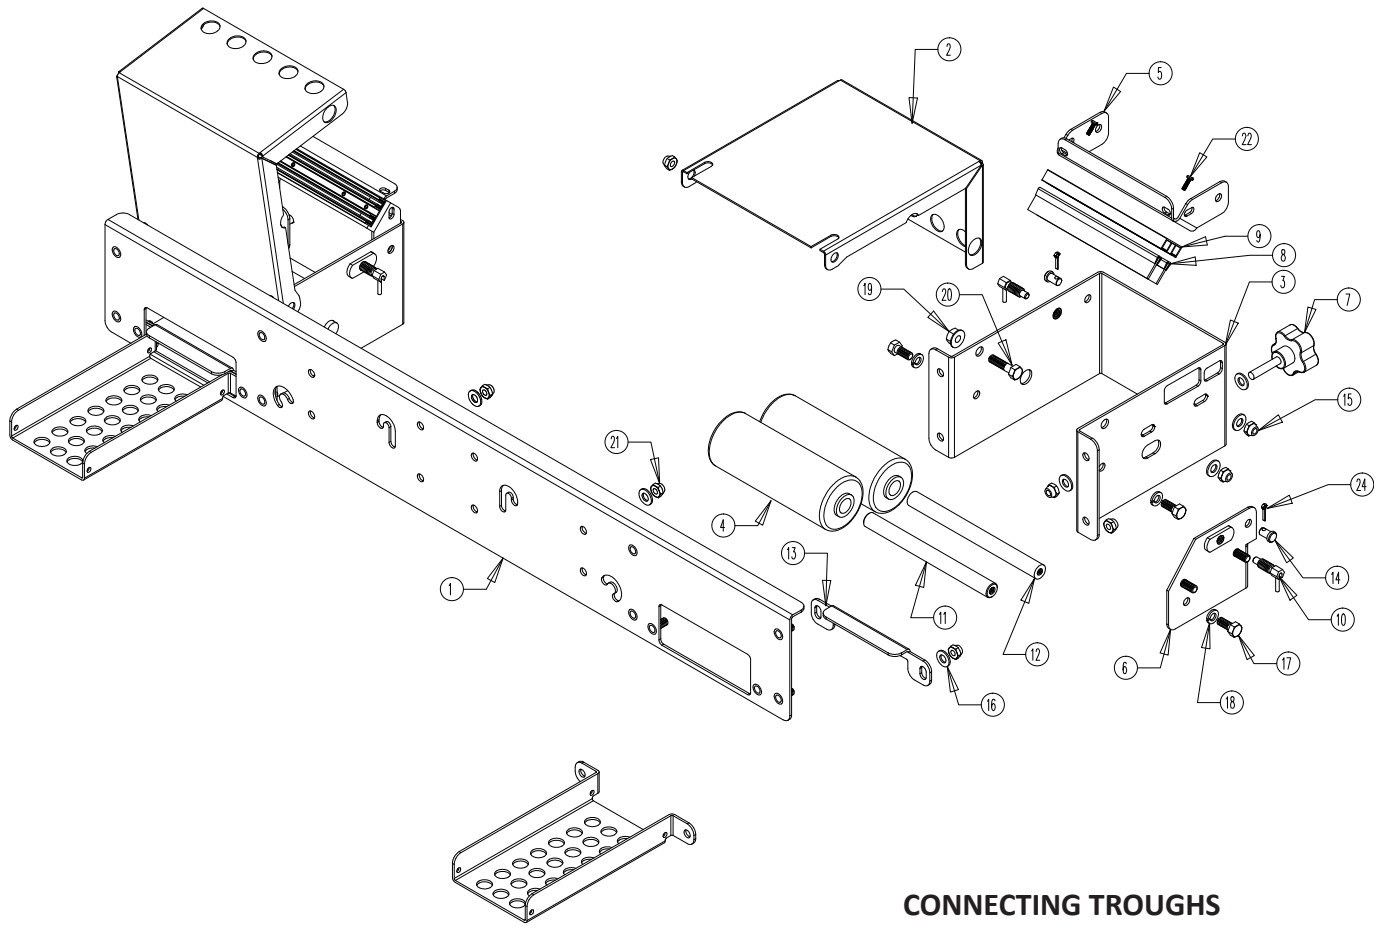

**CONNECTING TROUGHS
ORDERED SEPARATELY**

KEY	PART NO.	QTY.	DESCRIPTION	KEY	PART NO.	QTY.	DESCRIPTION
1	412166	1	RETURN BACK PANEL	13	412184	2	BELT SHIELD
2	412164	2	BELT COVER	14	500478	4	CLEVIS PIN
3	412188	1	RIGHT CASE	15	012789	22	5/16" NYLOK NUT
	412189	1	LEFT CASE	16	010426	16	5/16" FLAT WASHER
4	412123	4	ROLLERS	17	010643	14	5/16" X 3/4" HEX BOLT
5	412159	2	BRUSH BRACKET	18	010252	14	5/16" LOCK WASHERS
6	412173	1	RT. ADJUSTER BRKT.	19	501441	4	5/16" FLANGE NUTS
	412174	1	LEFT ADJUSTER BRKT	20	010647	4	5/16" X 1-1/4" BOLT
7	412133	2	ADJUSTER KNOBS	21	011114	8	5/16" NUT
8	412158	4	BRUSHES	22	011380	4	#8 X 3/8" TAP SCREW
9	412157	2	BRUSH RETAINERS	23	012774	8	3/16" POP RIVET
10	412360	4	LOCKING PLUNGER	24	012660	4	COTTER PIN
11	412181	2	DBL THREAD SHAFT				
12	412176	2	SGL THREAD SHAFT				